


LOW VACUUM AUDIO ALARM INSTRUCTIONS

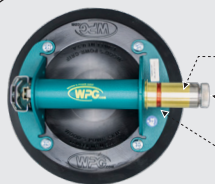

PLUNGER ASSEMBLY
WITH AUDIO ALARM
PLUNGER CAP WITH
SOUND EMISSION HOLES
RED LINE

NOTE: If you are retrofitting a hand cup with an audio alarm, follow the relevant Troubleshooting Guide (see TROUBLESHOOTING) to remove the old plunger assembly, install the new one, and leak-test the cup.

SPECIFICATIONS

Hand Cup Models

LJ6VHWBP, N4950WBP, N5450WBP, N6450WBP

Note: See hand cup instructions for all other pertinent information.

Volume

70 dBA at 36" (91 cm)

Power Source

one AAA size, 1.2-1.5-volt alkaline battery; automatic on/off function



OPERATION

Warning: Do not expose a battery to excessive heat, because the battery could explode (see SPECIFICATIONS: Environmental Conditions in hand cup instructions). Exposure to moisture can also damage the audio alarm or reduce its life.

TESTING

Before using the hand cup, make sure the audio alarm is functioning correctly and can be heard clearly over ambient sound in the work environment:

While leaving the sound emission holes uncovered, depress the plunger slightly. The audio alarm should sound; if not, see MAINTENANCE.

USE

Use the hand cup as directed in its instructions. Pump the plunger until the audio alarm stops sounding. If the audio alarm sounds while lifting, set down the load immediately and pump the plunger until the audio alarm is silent again.

Note: If the audio alarm sounds frequently, discontinue use and see MAINTENANCE: Service in the hand cup instructions.

STORAGE

If the audio alarm is used once a month or less often, remove the battery and store it separately, to prevent corrosion (see MAINTENANCE: Battery Replacement).

MAINTENANCE

INSPECTION

Inspect the audio alarm regularly for:

- failure to function correctly (see OPERATION).
- corrosion or other indications of battery leakage.

Warning: Avoid contact with battery leaks because they could damage eyes, skin, clothing or the plunger assembly.

Correct any faults before using the audio alarm (see Battery Replacement).

BATTERY REPLACEMENT

Caution: Follow the manufacturer's instructions for correct handling, storage and disposal of batteries.

- 1) Turn the plunger cap counter-clockwise to loosen it.
- 2) Remove the plunger cap and the old battery.
- 3) Install a new battery, making sure to orient the positive end (+) toward the red line and the negative end (-) toward the plunger cap.

Caution: Do not reverse battery polarity, because the audio alarm will not function.

- 4) Reinstall the plunger cap, turning clockwise to tighten it securely.

LIMITED WARRANTY

Wood's Powr-Grip products are guaranteed to be free of any defects in manufacturing or materials for **1 year from the date of purchase**.

Warranty does **NOT** cover:

- ✓ Cut or scratched rubber parts.
- ✓ Parts damaged by customer.
- ✓ Abnormal wear and tear.
- ✓ Abuse, misuse or neglect.
- ✓ Modified products.

TROUBLESHOOTING

Scan or click the following codes for:



Troubleshooting Guide &
Replacement Parts: Metal Hand Cups



Troubleshooting Video:
Metal Hand Cups



Troubleshooting Guide &
Replacement Parts: Vertical Handle and
Angle Grip Hand Cups

KEEP FOR YOUR RECORDS

Record this information, in case you need to claim Warranty service.

Date of Purchase:

Purchased From:

Model Number:

Stock Number:

For additional warranty information,
please scan or click this code or visit
wpg.com/warranty.

