

INTENDED FOR USE BY PROFESSIONAL EQUIPMENT OPERATORS

OPERATING INSTRUCTIONS



908 W. Main • P.O. Box 368

Laurel, MT USA 59044


(1) 800-548-7341

(1) 406-628-8231

www.wpg.com

**! READ AND UNDERSTAND BEFORE
OPERATING THIS EQUIPMENT**

APPLICABLE TO SERIAL NUMBERS 20200736
AND LATER. FOR EARLIER NUMBERS,
SEARCH WPG'S [ARCHIVE](#).

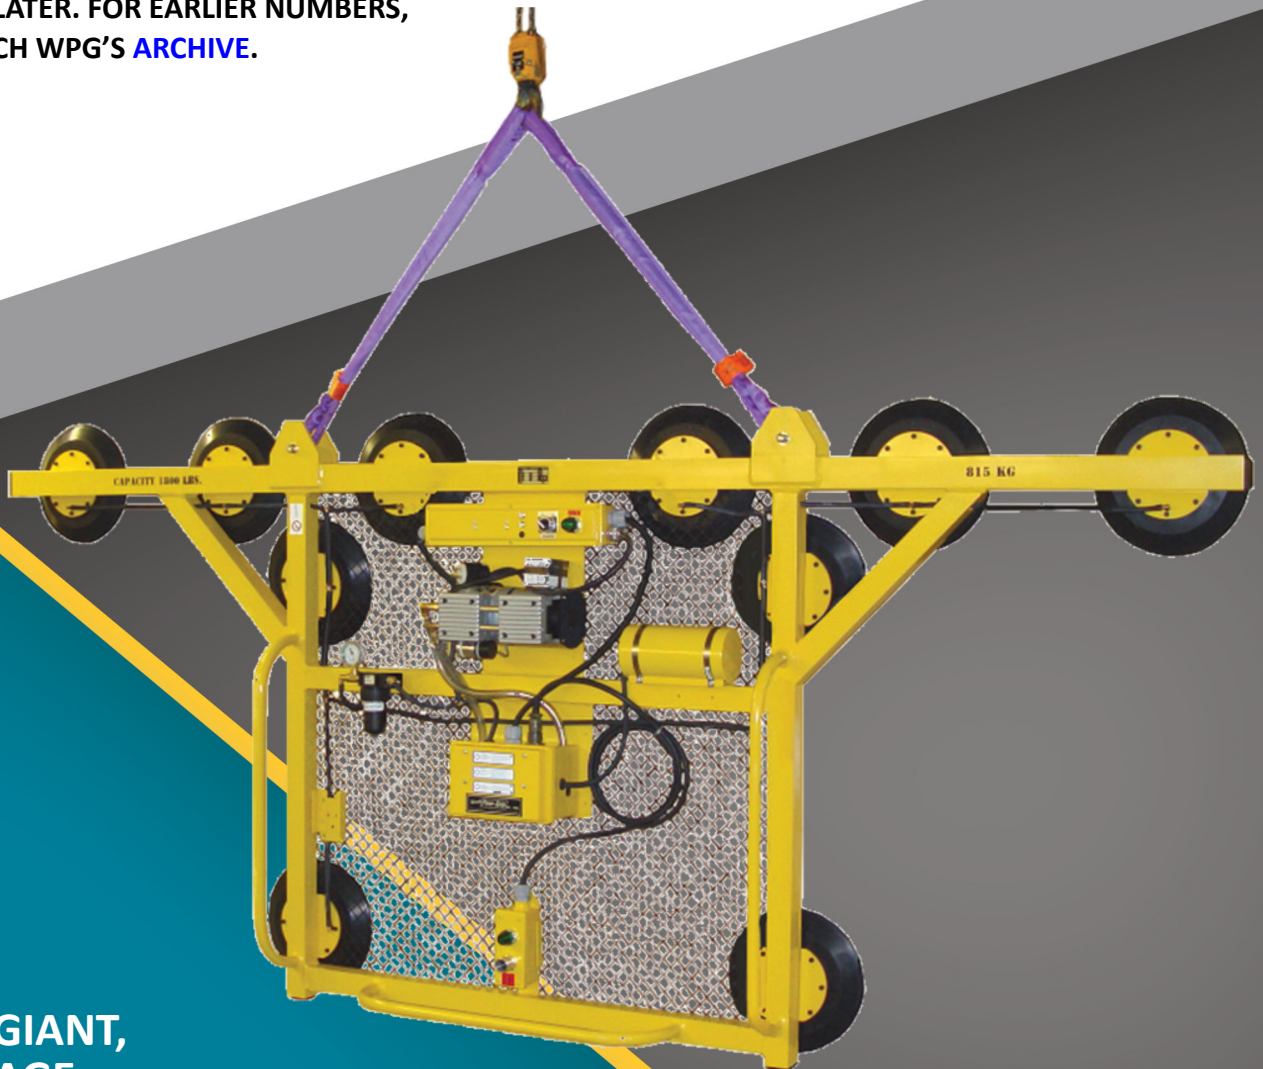

GENTLE GIANT, AC-VOLTAGE

Model numbers: VLGG109AC,
VLGG1011LAC (shown), VLGG1211LAC

Original Instructions © Wood's Powr-Grip Co., Inc.





TABLE OF CONTENTS

SPECIFICATIONS	3
SAFETY	4
OPERATING FEATURES.....	5
OPTIONAL SUPPORT FOOT ASSEMBLY FEATURES	6
ASSEMBLY	7
INTENDED USE	9
LOAD CHARACTERISTICS.....	9
INDIRECT LOADING	10
OPERATING ENVIRONMENT	10
DISPOSAL OF THE LIFTER	10
OPERATION.....	11
BEFORE USING THE LIFTER.....	11
Taking Safety Precautions	11
Performing Inspections and Tests	11
TO USE PAD SHUTOFFS	12
TO ADJUST THE OPTIONAL SUPPORT FOOT ASSEMBLIES.....	13
Adjusting for a Load's Vertical Dimensions.....	13
Adjusting for a Load's Thickness	13
TO ATTACH THE PADS TO A LOAD	14
Generating Airflow.....	14
Positioning the Lifter on the Load.....	14
Reading the Vacuum Gauge.....	15
TO LIFT AND MOVE THE LOAD.....	16
Interpreting the Lift Lights	16
Monitoring Vacuum Indicators	16
Controlling the Lifter and Load	17
In Case of a Power Failure.....	17
TO RELEASE THE PAD FROM THE LOAD	18
AFTER USING THE LIFTER.....	18
Storing the Lifter	19
Transporting the Lifter	19
INSPECTIONS AND TESTS.....	20


TABLE OF CONTENTS

INSPECTION SCHEDULE	20
TESTING	21
Lifter/Load Compatibility Test.....	21
Operational Tests	22
Vacuum Test.....	22
Rated Load Test.....	23
MAINTENANCE	24
VACUUM PAD MAINTENANCE.....	24
Pad-to-Load Friction Coefficient	24
Pad Inspection	24
Pad Cleaning	25
REPLACEMENT PARTS.....	26
REGISTRATION AND LIMITED WARRANTY	27
TO REGISTER THIS WPG PRODUCT	27
ABOUT THE LIMITED WARRANTY	27
Obtaining Warranty Service or Repair Service.....	27

  SPECIFICATIONS

Product Description	Designed for use with hoisting equipment, the VLGG-AC lifters support loads using vacuum for lifting in the upright orientation.		
Model Number	VLGG109AC	VLGG1011LAC	VLGG1211LAC
Vacuum Pads (10 each, standard rubber ¹)	9" [23 cm] nom. diameter (Model VPFS9)	11" [28 cm] nom. diameter, lipped (Model G3370)	11" [28 cm] nom. diameter, lipped (Model G3370)
Pad Spread (to outer edges)	51¼" x 117½" [130 cm x 299 cm]	53¾" x 120" [137 cm x 305 cm]	53¾" x 120" [137 cm x 305 cm]
 Maximum Load Capacity²	Per-Pad: 120 lbs [54.5 kg] Overall: 1200 lbs [545 kg]	Per-Pad: 180 lbs [81.5 kg] Overall: 1800 lbs [815 kg]	Per-Pad: 180 lbs [81.5 kg] Overall: 2100 lbs [955 kg]
 Lifter Weight³	190 lbs [87 kg]	200 lbs [91 kg]	205 lbs [93 kg]
Power Source	See serial number plate for specific AC voltage, frequency and amperage.		
Product Options	Available with Individual Pad Shutoffs. Available with Adjustable Support Foot Assemblies. See separate instructions about other options.		
 Operating Elevation	Up to 6,000 feet [1,828 meters]		
 Operating Temperatures	32° — 104° F [0° — 40° C]		
Service Life	16,000 lifting cycles, when used and maintained as intended. ⁴		
ASME Standard BTH-1	Design Category "B", Service Class "0"		
Troubleshooting Guide	TST-016_GENERIC_LEAK_TEST_rev_2014-086		

- 1..... Available with [other rubber compounds](#) for special purposes.
- 2..... The Maximum Load Capacity is rated at a vacuum of 16" Hg [-54 kPa] on clean, smooth, nonporous flat surfaces with a friction coefficient of 1. Pad compound, load rigidity, strength, surface conditions, overhang, angle, center of gravity and temperature can also affect the lifting capacity. A "qualified person" should evaluate the effective lifting capacity for each use (see definition under ["Rated Load Test"](#)).
- 3..... Does not include options; see serial label for lifter weight including options, when applicable.
- 4..... Vacuum pads, filter elements and other wear-out items are excluded.

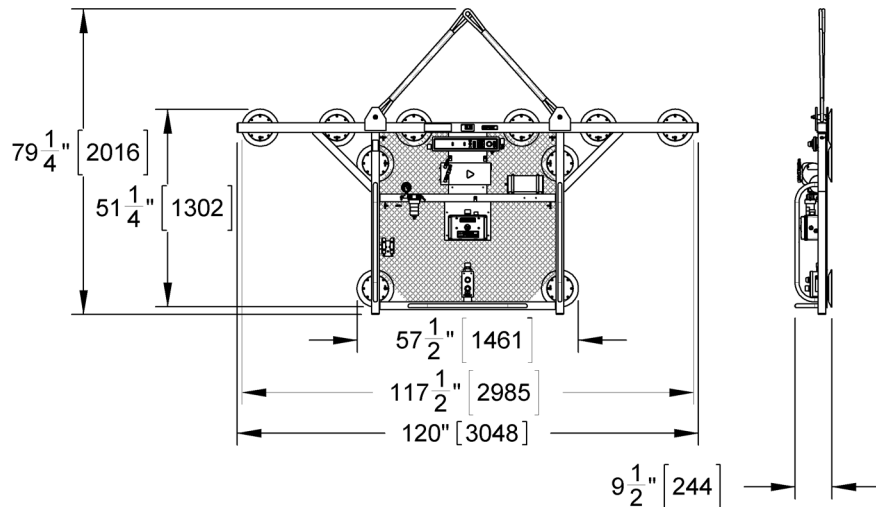

Note: A standard VLGG109AC is shown.

SAFETY



Wear personal protective equipment that is appropriate for the load material. Follow trade association guidelines.



Do not remove or obscure safety labels.



Do not make any modifications to the lifter. Modifying the lifter will void the Limited Warranty.



Use the lifter only in an approved "OPERATING ENVIRONMENT" (see "INTENDED USE").



Make sure to consider all possible effects of "INDIRECT LOADING" on lifting capacity (see "INTENDED USE").



Do not use a lifter that is damaged, malfunctioning, or missing parts.



Do not use a lifter if the sealing edge of any vacuum pad is cut or otherwise damaged.



Do not use a lifter to lift cracked or broken glass.



Do not exceed the Maximum Load Capacity or lift loads the lifter is not designed for (see "INTENDED USE").



Do not use a lifter if the Maximum Load Capacity or any safety label appears to be missing or obscured.



Make sure the contact surfaces of the load and vacuum pad are clean before attaching the lifter (see "MAINTENANCE").



Position the vacuum pad correctly on the load before lifting (see "OPERATION").



Do not lift a load if any vacuum indicator shows inadequate vacuum.



Keep unauthorized personnel away from the lifter, to avoid injury in case of an unintended load release.



Do not touch the vacuum release controls during a lift.



Do not allow people to ride on the lifter or the load.



Do not lift a load higher than necessary or leave suspended loads unattended.




Do not position a loaded or unloaded lifter over people.



Before servicing a powered lifter, place the power control in the inactive position and, when possible, disconnect the power source.

OPERATING FEATURES

Features shown here are underlined> on their first appearance in each section following.

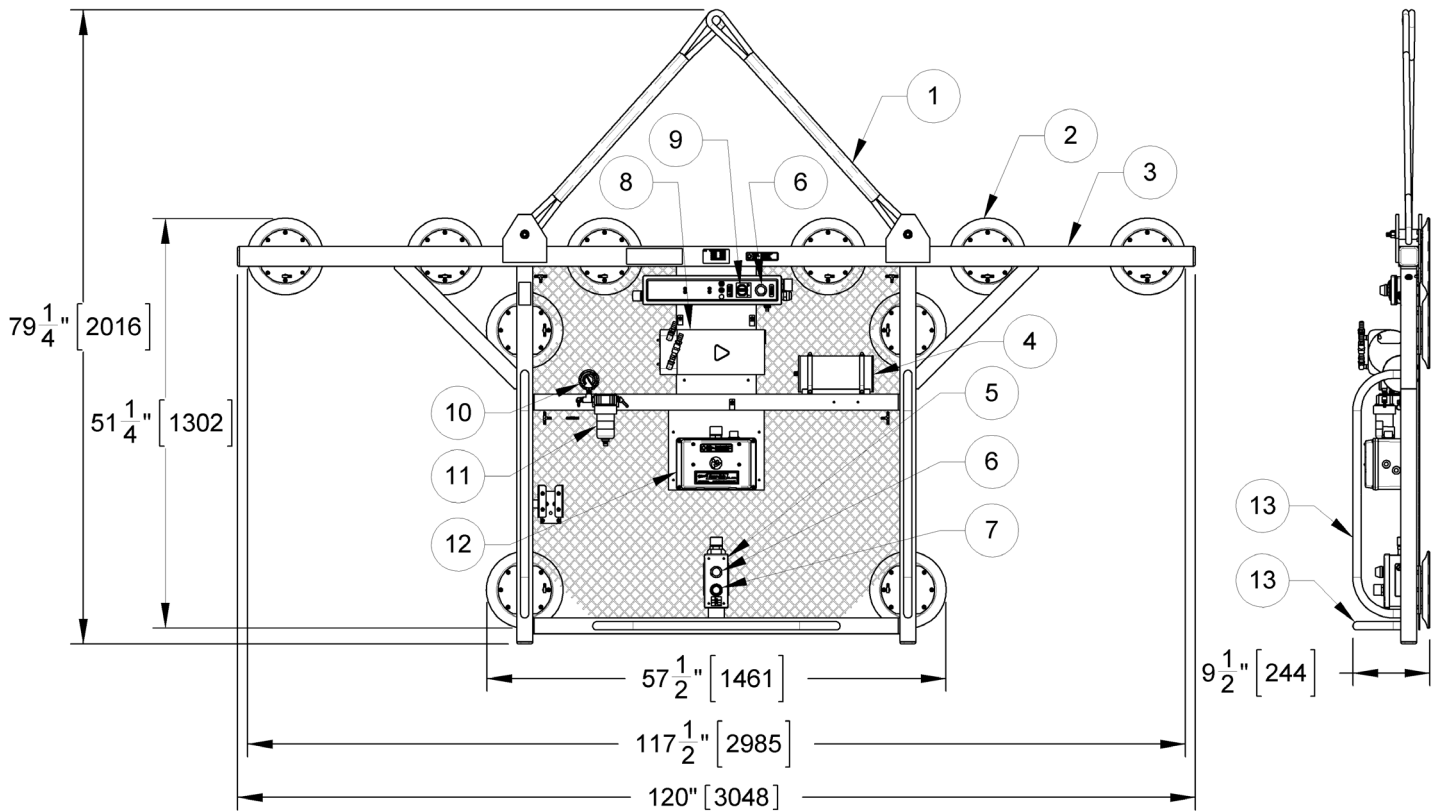

- | | | |
|-------------------------|---------------------------|-------------------------------|
| 1 LIFT SLING | 2 VACUUM PAD | 3 PAD FRAME |
| 4 VACUUM RESERVE TANK | 5 MOVABLE CONTROL PENDANT | 6 VACUUM LIFT LIGHTS |
| 7 VACUUM RELEASE BUTTON | 8 VACUUM PUMP | 9 POWER SWITCH |
| 10 VACUUM GAUGE | 11 AIR FILTER | 12 Enclosure w/ VACUUM SWITCH |
| 13 CONTROL HANDLES | | |


Note: A standard VLGG109AC is shown. Although some of the following photos do not show this specific lifter, they all illustrate how this kind of lifter functions.

For information about specific parts, see ["REPLACEMENT PARTS"](#) and/or any separate instructions for Product Options.

OPERATING FEATURES

Features shown here are underlined on their first appearance in each section following.

OPTIONAL SUPPORT FOOT ASSEMBLY FEATURES

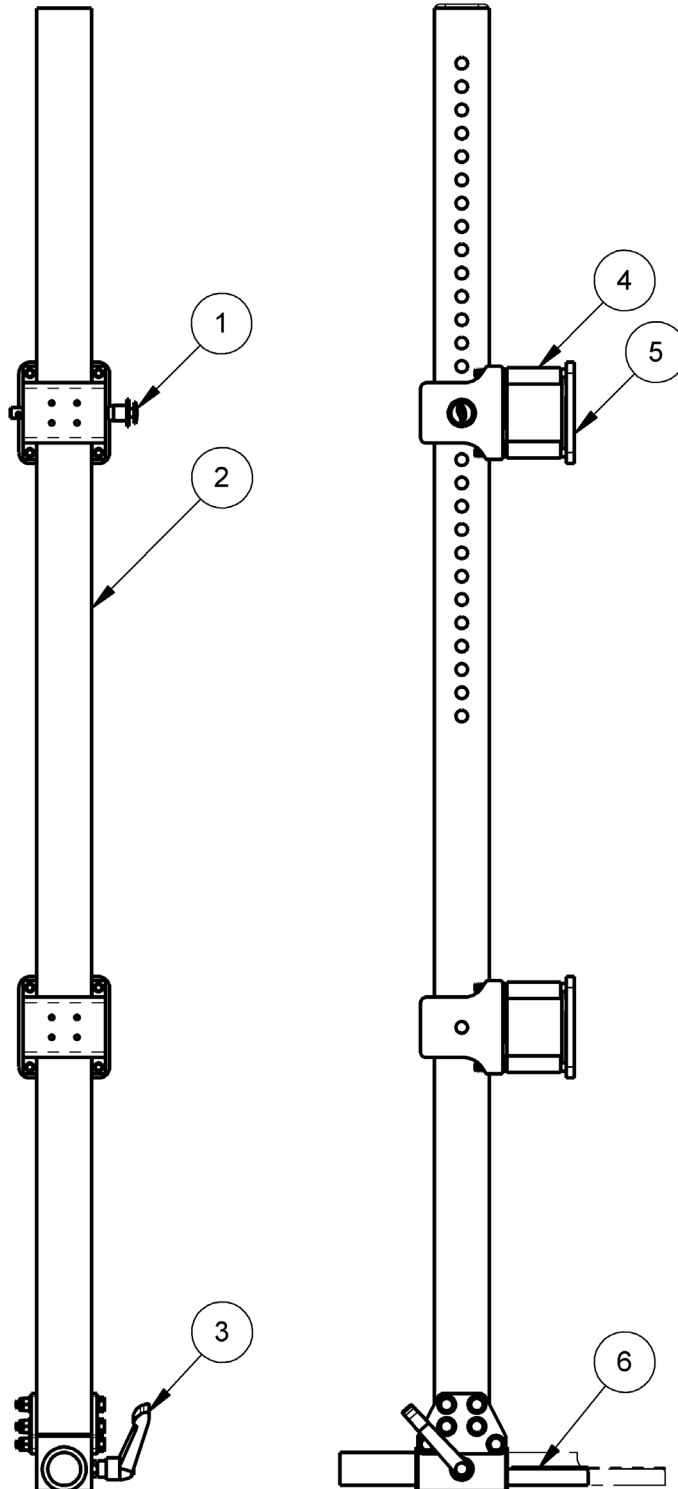

- 1 COTTERLESS HITCH PIN
- 2 TELESCOPING TUBE
- 3 ADJUSTMENT LEVER
- 4 PAD FRAME MOUNTING BOLT
- 5 PAD FRAME MOUNTING BRACKET
- 6 SUPPORT FOOT

For information about specific parts, see ["REPLACEMENT PARTS"](#).

ASSEMBLY

- 1) Remove all lifter restraints and save them with the shipping container for future use.
- 2) Connect the power cable:

- 2.1) Wire the female connector provided to an appropriate power source, as indicated on the label attached.



Make sure power source has ground fault circuit interrupter.



Wiring must be done by qualified personnel, taking all appropriate safety precautions.

Note: Brown-outs, over-taxed generators, extension cords and other conditions can reduce power at the lifter.



Without adequate power, lifter could release load, resulting in load damage and personal injury.

- 2.2) Route the power cable so that it does not become tangled during operation.
- 2.3) Insert the power cable's male connector into the female connector and twist to secure them together (fig. 2A-B).

2A




2B



- 3) Suspend the lifter from appropriate hoisting equipment:

- 3.1) Select a crane and/or hoist rated for the Maximum Load Capacity plus the Lifter Weight.

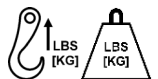

Note: Any lifter use must comply with all statutory or regulatory standards for hoisting equipment in your region.


- 3.2) Make sure the lift slings are securely attached to the lifter (circled in fig. 3A).

3A



ASSEMBLY

- 3.3) Attach the free eye of each lift sling to the hoisting equipment hook (fig. 3B).

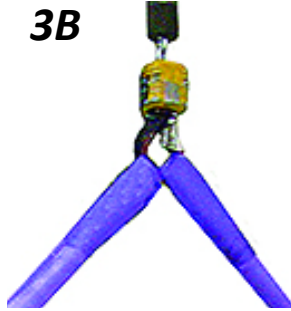

! Make sure hook has restraining latch (circled right).



Note: A large clevis makes it easier to connect or disconnect the lift slings.

! Only use clevis and clevis pin rated for Maximum Load Capacity plus Lifter Weight.

- 3.4) Use the hoisting equipment to remove the lifter from the shipping container. Avoid damaging the vacuum pads.

- 4) Remove the pad covers (fig. 4A) and save them for future use.
5) Perform tests as required under “**TESTING**”.



LOAD CHARACTERISTICS

Make sure the vacuum lifter is intended to handle each load according to these requirements:



Do NOT lift explosives, radioactive substances or other hazardous materials.



- The load weight must not exceed the Maximum Load Capacity.
- The load must be a single piece of relatively nonporous material with a flat and relatively smooth contact surface.^{1, 2} To determine whether the load is too porous or rough, perform the “[Lifter/Load Compatibility Test](#)”.
- The load's contact surface must be able to obtain a friction coefficient of 1 with the lifter's vacuum pad (see “[Pad-to-Load Friction Coefficient](#)”). Otherwise, the capacity should be derated appropriately.
- The load's surface temperature must not exceed the Operating Temperatures.³
- The load's *minimum* length and width are determined by the current Pad Spread (see “SPECIFICATIONS”).
- The load's *maximum* length and width are determined by its allowable overhang.⁴
- 1" [2.5 cm] is the allowable thickness at Maximum Load Capacity.⁵



Note: Standard vacuum pads can stain or deform load surfaces with light colors or soft coatings. Test such surfaces for damaging effects before using the lifter on them.⁶

1..... Although concave vacuum pads can also attach to some curved loads, curvature can reduce lifting capacity. Contact WPG for more information.

2..... A “single piece” of material includes curtainwall assemblies, unitized glazing systems and similar construction units.

3..... Vacuum pads made from a heat-resistant rubber compound can enable you to lift loads with higher surface temperatures. Contact WPG or an authorized dealer for more information.

4..... The allowable overhang is the amount of load material that can extend sideways beyond the vacuum pad without breaking or otherwise being damaged. This depends on the load material, its thickness, and the angle of handling (if any). Since every material has different physical properties, the allowable overhang must be evaluated separately for each load type. Contact WPG or an authorized dealer for more information.

5..... However, the allowable thickness increases as load weight decreases. Contact WPG for more information.

6..... Alternative rubber compounds are available for these purposes. Contact WPG or an authorized dealer for more information.

INDIRECT LOADING

Make sure to account for dynamic loading or other inadvertent loading that can negatively affect lifting capacity, such as:

- Weight amplification that results when a loaded vacuum lifter abruptly starts/stops moving, changes direction or bounces up and down (eg, when a telehandler transports a loaded lifter across rough terrain).
- External force that effectively increases the weight of a lifter's attached load (eg, when a load of sheet material reacts to wind gusts).



Indirect loading can reduce lifting capacity.

OPERATING ENVIRONMENT

Make sure the lifter is suitable for each work environment, given the following restrictions:

- This lifter is not intended for any environment that is dangerous to the operator or damaging to the lifter. Avoid environments containing explosives, caustic chemicals and other dangerous substances.




Never use lifter in dangerous environments.



Metal particles and similar environmental contaminants could result in vacuum pump failure.

- The work environment is limited by the Operating Elevation and Operating Temperatures.^{1, 2}
- The lifter is not designed to be watertight. Do not use it in rain or other unsuitable conditions.

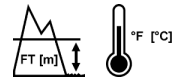

Moisture can reduce lifting capacity.

CE/UKCA — A secondary positive holding device is required to lift loads on construction sites.

DISPOSAL OF THE LIFTER

After the Service Life of the lifter has ended (see "SPECIFICATIONS"), dispose of it in compliance with all local codes and applicable regulatory standards.

1..... Although lifter use may be possible at higher elevation, lifting capacity is reduced whenever the lifter is unable to attain vacuum in the green range on the vacuum gauge. Contact WPG for more information.

2..... Special provisions may allow the lifter to operate outside the specified temperature range. Contact WPG for more information.

BEFORE USING THE LIFTER

Determine whether the vacuum lifter is capable of each intended task (see “SPECIFICATIONS” and “[INTENDED USE](#)”). Then complete the following preparations:

Taking Safety Precautions

- Be trained in all industry and regulatory standards for lifter operation in your region.
- Follow trade association guidelines about precautions needed for each load material.



Read all directions and safety rules before using lifter.



Always wear appropriate personal protective equipment.

Performing Inspections and Tests

- Follow the “[INSPECTION SCHEDULE](#)” and “[TESTING](#)”.
- Service the air filter whenever its bowl contains liquid or other contaminants or its element appears dirty (see “AIR FILTER MAINTENANCE” in [SERVICE MANUAL](#)).¹



Examine air filter regularly and service when needed.

1..... Lifters used on wet load surfaces must be equipped with 2 or more filters connected *in series*. See “[OPERATING ENVIRONMENT](#)” for restrictions.

TO USE PAD SHUTOFFS

Each pad shutoff on the pad frame controls the vacuum line to the adjacent vacuum pad. Activating or deactivating the airflow at specific pads enables the lifter to handle loads with different weights and dimensions (see “SPECIFICATIONS”) or to avoid holes in the load surface.

To support the maximum load weight and larger load dimensions, all pads must be activated; for smaller weights and dimensions, some pads may be deactivated, ***provided that the lifter still has sufficient capacity to support the load*** (see “LOAD CHARACTERISTICS”).



Closing any pad shutoff reduces lifting capacity.

To activate a pad, open the shutoff valve (ie, place lever *parallel* with vacuum line — fig. 1A).



To deactivate a pad, close the shutoff valve (ie, place lever *perpendicular* to vacuum line — fig. 1B).



To calculate the lifting capacity when some pads are deactivated, consult the Per-Pad Load Capacity and multiply by the number of pads currently activated. Always activate pads in a symmetrical configuration and use as many pads as possible for each load being lifted, to maximize lifting capacity and to minimize load overhang.



OPERATION


TO ADJUST THE OPTIONAL SUPPORT FOOT ASSEMBLIES



Make sure both support foot assemblies are identically adjusted.


Adjusting for a Load's Vertical Dimensions

- 1) Remove the cotterless hitch pin (circled in fig. 1A).
- 2) Move the telescoping tube to the desired position (see arrow in fig. 1A).
- 3) Reinsert the pin, to secure.

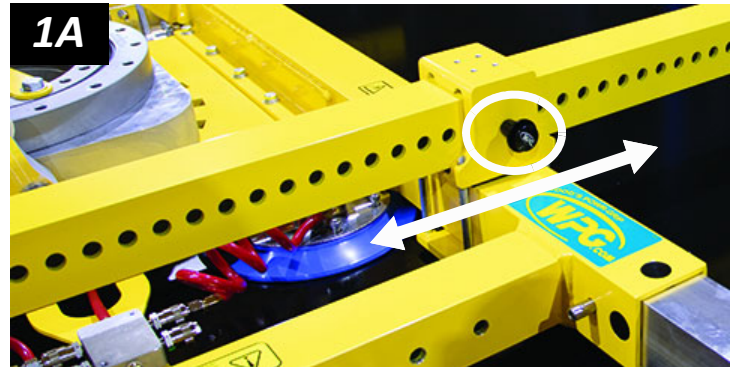

Adjusting for a Load's Thickness

- 1) Move the adjustment lever (circled in fig. 1B) as needed to loosen the support foot.
- 2) Reposition the support foot as desired.
- 3) Move the adjustment lever as needed to secure the support foot.

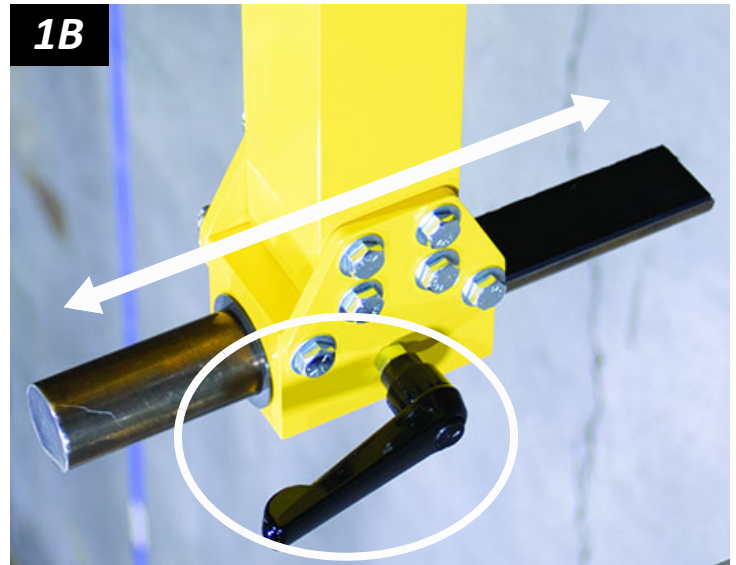

TO ATTACH THE PADS TO A LOAD

Generating Airflow

Place the power switch in the “on” position (|), to engage the vacuum pump.¹



Keep pump running throughout lift.

The lifter is designed for the vacuum pump to run continuously. Placing the power switch in the “off” position (○) during lifter operation could result in a load release and personal injury (see “[In Case of a Power Failure](#)”).



Positioning the Lifter on the Load

Caution: Attach this lifter only to vertically oriented loads.

- 1) Make sure the contact surfaces of the load and vacuum pads are clean (fig. 1A; see “[Pad Cleaning](#)”).

1A



- 2) Center the pad frame from left to right on the load, and position the uppermost pads near the top edge, to maximize stability (fig. 2A).

2A



1..... If any powered component fails to function while the power switch is in the “on” position, make sure the lifter is connected correctly to an appropriate power source (see “ASSEMBLY”). If so, examine each circuit breaker (next to power switch) to determine whether it has interrupted the electrical circuit to the component. Although you can reset the circuit breaker, the power interruption may indicate an electrical problem that requires attention. Any fault must be corrected before resuming normal operation of the lifter.


OPERATION

- 3) Make sure all vacuum pads will fit on the load and will be loaded evenly (fig. 3A).



Consult the Per-Pad Load Capacity.

- 4) Place the vacuum pads in contact with the load surface until they begin to seal.¹

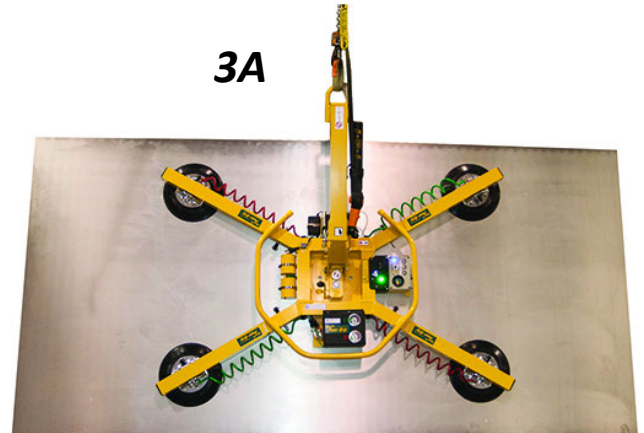

Reading the Vacuum Gauge

A vacuum gauge shows the current vacuum level in positive inches of Hg and negative kPa:

- **Green range** (≥ 16 " Hg [≤ -54 kPa]): Vacuum level is sufficient to lift the maximum load weight (fig. 1B).
- **Red range** (< 16 " Hg [> -54 kPa]): Vacuum level is **not** sufficient to lift the maximum load weight (fig. 1C).

1B



1C



If it takes more than 5 seconds for the vacuum level to reach 5" Hg [-17 kPa], press on any vacuum pad that has not yet sealed.

Once the pads have sealed, the lifter should be able to maintain sufficient vacuum for lifting, except when used above the maximum Operating Elevation.² If it does not, perform the "Vacuum Test".

Note: Disconnecting the movable control pendant during lifter operation is likely to result in a load release and personal injury.



Do not disconnect control pendant.

1..... Although a vacuum pad may become distorted during shipping or storage, this condition should correct itself with continued use.


2..... If the lifter is used above the maximum Operating Elevation (see "SPECIFICATIONS"), it may not be able to maintain sufficient vacuum for lifting. Contact WPG for more information.

OPERATION

TO LIFT AND MOVE THE LOAD



Never lift load when lifter is in horizontal orientation.

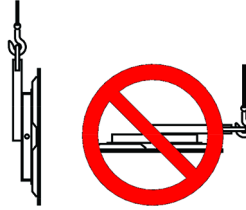

Interpreting the Lift Lights



When vacuum is sufficient to lift the Maximum Load Capacity, the vacuum lift lights turn on automatically.



Never lift load unless lift lights are illuminated, because premature lifting could result in load release and personal injury.

Monitoring Vacuum Indicators

Monitor the vacuum lift lights and the vacuum gauge (fig. 1A) throughout the entire lift.

The vacuum pump runs continuously to maintain sufficient vacuum for lifting the maximum load weight.

However, if the lift lights turn off and the ***vacuum gauge shows a level less than 16" Hg [greater than -54 kPa]***:



Make sure all vacuum indicators remain completely visible.

- 1) Keep everyone away from a suspended load until it can be safely lowered to a stable support.



Stay clear of any suspended load while indicators warn of low vacuum.

- 2) Stop using the lifter until the cause of the vacuum loss can be identified: Conduct the "Pad Inspection" and perform the "Vacuum Test".
- 3) Correct any faults before resuming normal operation of the lifter.


OPERATION

Controlling the Lifter and Load

When the lifter is ready, use the hoisting equipment to raise the lifter and load as needed.

Use a control handle (circled in fig. 1A) to keep the lifter and load in the required position.

Once there is enough clearance, you may move the load as required.

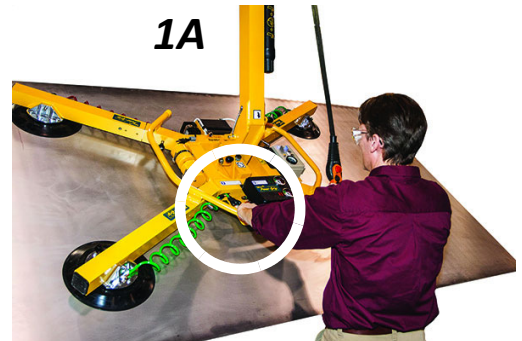

Never allow any pad shutoff to be opened or closed while lifting, because this could result in a load release and personal injury.

In Case of a Power Failure

A vacuum reserve tank helps maintain vacuum temporarily in the event of a power failure. Although the lifter is designed to support the load for at least 5 minutes without power, this depends on many factors, including the “[LOAD CHARACTERISTICS](#)” and the condition of the vacuum pads (see “[VACUUM PAD MAINTENANCE](#)”).

If a power failure occurs, keep everyone away from a suspended load until it can be safely lowered to a stable support. Correct any faults before resuming normal operation of the lifter.



Stay clear of any suspended load during power failure.

OPERATION

TO RELEASE THE PAD FROM THE LOAD



Make sure load is at rest and fully supported before releasing vacuum pad.

- 1) Push the vacuum release button (|→) — circled in fig. 1A) on the movable control pendant, to break the vacuum seal.



- 2) Continue to hold the release button until the vacuum the load completely. Otherwise, the lifter will automatically reattach.



Do not move lifter until pads release completely, because such movement could result in load damage or personal injury.

- 3) Before you lift another load, perform the Every-Lift Inspection (see “[INSPECTION SCHEDULE](#)”).

AFTER USING THE LIFTER

- 1) Place the power switch in the “off” position (○).
- 2) Use the hoisting equipment to lower the vacuum lifter gently onto a stable support. Then detach the hoisting hook from the lift point.

***Caution:* Do not set the lifter on surfaces that could soil or damage vacuum pad.**



OPERATION

Note: Parking feet (circled) on the pad frame can be used to support an unloaded lifter when not suspended. Make sure the lifter leans securely against an appropriate support that does not contact the vacuum pads.



Storing the Lifter

- 1) Disconnect the electrical connectors (figs. 1A-B).

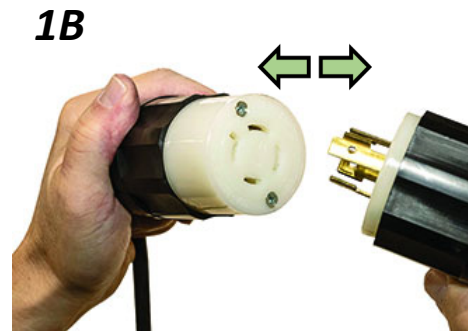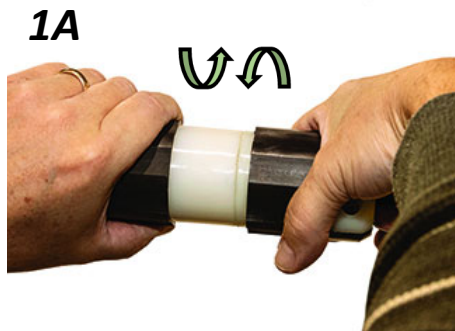

- 2) Use the covers supplied to keep the vacuum pad clean (fig. 2A).

CE/UKCA — To prevent the lifter from tipping over on relatively horizontal surfaces, place the vacuum pads facedown on a clean, smooth, flat surface. Be careful to protect the vacuum pads while tilting it to the horizontal position.



- 3) Store the lifter in a clean, dry location.

Transporting the Lifter

Secure the lifter in the original shipping container with the original shipping materials or equivalent.

INSPECTIONS AND TESTS

INSPECTION SCHEDULE

Perform inspections according to the following frequency schedule. If any fault is found, correct it and perform the next most frequent inspection before using the vacuum lifter.

Note: If a lifter is used less than 1 day in a 2-week period, perform the Periodic Inspection before using it.

Action	Every Lift	Frequent ¹ (every 20-40 hrs)	Periodic ² (every 250-400 hrs)
Examine <u>vacuum pad</u> for contaminants or damage (see “Pad Inspection”).	✓	✓	✓
Examine load surface for contaminants or debris.	✓	✓	✓
Examine controls and indicators for damage.	✓	✓	✓
Examine lifter’s structure for damage.		✓	✓
Examine vacuum system for damage (including <u>vacuum pads</u> , fittings and hoses).		✓	✓
Examine <u>air filter</u> for conditions requiring service (see “AIR FILTER MAINTENANCE” in SERVICE MANUAL).		✓	✓
Perform “Vacuum Test” .		✓	✓
Check for unusual vibrations or noises while operating lifter.		✓	✓
Examine entire lifter for evidence of: <ul style="list-style-type: none"> • looseness, excessive wear or excessive corrosion • deformation, cracks, dents to structural or functional components • cuts in vacuum pad or hoses • any other hazardous conditions 			✓
Inspect entire electrical system for damage, wear or contamination that could be hazardous, in compliance with all local codes and regulatory standards. Caution: Use appropriate cleaning methods for each electrical part, as specified by codes and standards. Improper cleaning can damage parts.			✓

1..... The Frequent Inspection is also required whenever the lifter has been out of service for 1 month or more.

2..... The Periodic Inspection is also required whenever the lifter has been out of service for 1 year or more. Keep a written record of all Periodic Inspections. If necessary, return the lifter to WPG or an authorized dealer for repair (see [“REGISTRATION AND LIMITED WARRANTY”](#)).

TESTING

Perform the following test to determine whether or not a load surface is too porous or rough:

Lifter/Load Compatibility Test¹

- 1) Make sure the vacuum generating system is functioning correctly (see “[Vacuum Test](#)”).
- 2) Thoroughly clean the load surface and the vacuum pad (see “[Pad Cleaning](#)”).
- 3) Place the load in the upright position on a stable support.
- 4) Attach the vacuum pad to the load as previously directed.
- 5) After the vacuum level appears in the green range on the vacuum gauge, place the power switch in the “off” position (○).
- 6) Raise the load a minimal distance, to make sure it is supported by the lifter.
- 7) Watch the vacuum gauge: ***Starting from a vacuum level of 16" Hg [-54 kPa], the lifter must maintain a vacuum level greater than 12" Hg [less than -41 kPa] for 5 minutes.***² If not, lifting this load requires additional precautions (eg, a load sling). Contact WPG for more information.
- 8) Lower the load *after* 5 minutes or *before* the vacuum level diminishes to 12" Hg [increases to -41 kPa].



Take precautions in case load should fall during test.

1..... The “[Pad-to-Load Friction Coefficient](#)” can affect the outcome of this test.

2..... Under CE and UKCA requirements, the lifter must maintain a vacuum level ***greater than 8" [less than -27 kPa]***.


INSPECTIONS AND TESTS


Perform the following tests before placing the lifter in service *initially, following any repair,* when directed in the “*INSPECTION SCHEDULE*”, or *whenever necessary*:


Operational Tests


Test all features and functions of the lifter (see “OPERATING FEATURES” and “OPERATION”).

Vacuum Test

- 1) Clean the face of the vacuum pad (see “*Pad Cleaning*”).
- 2) Use a test load with weight equal to the Maximum Load Capacity, a clean, smooth, nonporous surface and other appropriate “*LOAD CHARACTERISTICS*”.¹ 
- 3) Attach the lifter to the test load as previously directed.
- 4) After the vacuum level appears in the green range on the vacuum gauge, raise the load a minimal distance and place the power switch in the “off” position (○).

 ***Take precautions in case load should fall during test.***
- 5) Watch the vacuum gauge: *The vacuum level should not decrease by more than 4" Hg [increase by more than -14 kPa] in 5 minutes.*
- 6) Lower the load after 5 minutes or whenever a lifter fails the test, and release the load as previously directed.

 ***Never use lifter that has failed test.***
- 7) Qualified service personnel must correct any fault in the vacuum system before returning the lifter to service.


 ***This service must be performed by qualified service personnel.***

1..... The load should have either a flat surface or no more curvature than the lifter is designed for, if any.

INSPECTIONS AND TESTS

Rated Load Test¹

The following steps must be performed or supervised by a qualified person:²

- 1) Use a test load that weighs 125% ($\pm 5\%$) of the Maximum Load Capacity and has the appropriate “LOAD CHARACTERISTICS”. 
- 2) Attach the vacuum pad to the load as previously directed.
- 3) Position the load to produce the greatest stress on the lifter consistent with “INTENDED USE”.
- 4) Raise the load a minimal distance and leave it suspended for 2 minutes.
- 5) Once the test is completed, lower the load for release as previously directed.
- 6) Inspect the lifter for any stress damage, and repair or replace components as necessary to successfully pass the test.
- 7) Prepare a written report of the test and keep it on file.



Take precautions in case load should fall during test.



Never use lifter that has failed test.

1..... An equivalent simulation may also be used. Contact WPG for more information.

2..... A “qualified person” has successfully demonstrated the ability to solve problems relating to the subject matter and work, either by possessing a recognized degree in an applicable field or a certificate of professional standing, or by possessing extensive knowledge, training and experience.

Note: Refer to **SERVICE MANUAL #35275** when applicable.

VACUUM PAD MAINTENANCE

Pad-to-Load Friction Coefficient

The friction coefficient represents the lifter's ability to resist load slippage. The Maximum Load Capacity is based on a friction coefficient of 1, as determined by testing of clean, new, standard rubber vacuum pads on clean, dry, regular glass. ***If the lifter is used under any other conditions, a qualified person must first determine the effective lifting capacity.***¹



Long-term exposure to heat, chemicals or UV light can damage vacuum pads. Replace pads every 2 years or more often when necessary.

Pad Inspection


Inspect vacuum pad (fig. 1A) according to the “**INSPECTION SCHEDULE**” and correct the following faults before using the lifter (see “**REPLACEMENT PARTS**”, when applicable):

- Contaminants on the face (item 1 in fig. 1A) or sealing edges (item 2 in fig. 1A).
- Filter screen (item 3 in fig. 1A) missing from face.



Replace any pad that has damaged sealing edges.

- Nicks, cuts, deformation or abrasions in sealing edges.
- Wear, stiffness or glaze.

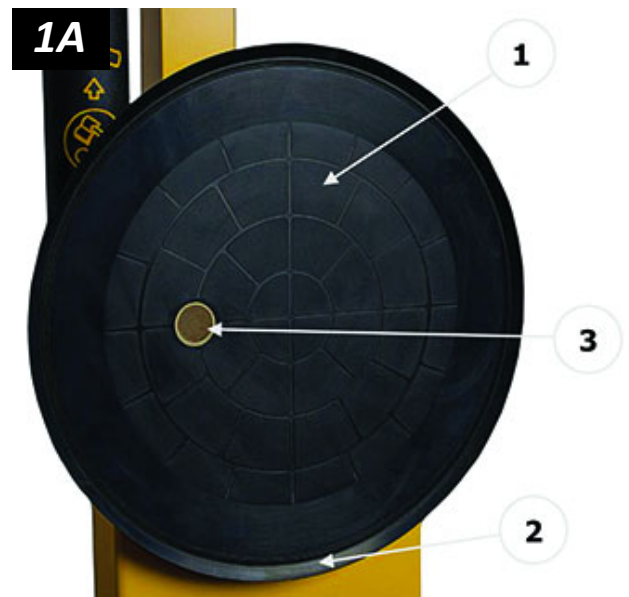

1..... A “qualified person” has successfully demonstrated the ability to solve problems relating to the subject matter and work, either by possessing a recognized degree in an applicable field or a certificate of professional standing, or by possessing extensive knowledge, training and experience.

Pad Cleaning

- 1) Regularly clean the face of vacuum pad (fig. 1A), using soapy water or other mild cleansers to remove oil, dust and other contaminants.



Never use harsh chemicals on vacuum pad.

Solvents, petroleum-based products (including kerosene, gasoline and diesel fuel) or other harsh chemicals can damage vacuum pads.



Never use rubber conditioners on vacuum pad.

Many rubber conditioners can leave a hazardous film on vacuum pads.

- 2) Prevent liquid from entering the vacuum system through the suction hole on the pad face.
- 3) Wipe pad face clean, using a clean sponge or lint-free cloth to apply the cleanser.¹
- 4) Allow pad to dry completely before using the lifter.

1A



¹..... A brush with bristles *that do not harm rubber* can help remove contaminants clinging to sealing edges. If these cleaning methods are not successful, contact WPG or an authorized dealer for assistance.

REPLACEMENT PARTS

Stock No.	Description	Qty.
93012	Pad Shutoff Valve Assembly (assembly only)	10/12
93011	Pad Shutoff Valve Assembly (retrofit assembly kit)	10/12
65444	Vacuum Hose – 1/2" ID x 0.748" OD – Clear	*
65440	Vacuum Hose – 0.245" ID x 3/8" OD – Red	*
65438	Vacuum Hose – 1/8" ID x 1/4" OD – White	*
65322	Lift Sling – 3' Length	2
65010	Pad Spring – Coil Type	10/12
64289	Bulb – 24 V – Bayonet (for vacuum lift lights)	2
64262	Green Lens (for vacuum lift lights)	2
53132	Hose Fitting – Tee – 5/32" ID	5
53128	Pad Fitting – Tee – 5/32" ID	4/6
53122	Pad Fitting – Elbow – 5/32" ID	6
49646T	Vacuum Pad – Model G3370 / 11" [28 cm] Diameter – Lipped (for VLGG1011LAC, VLGG1211LAC)	10/12
49506TA	Vacuum Pad – Model VPFS9 / 9" [23 cm] Diameter (for VLGG109AC)	10
49150	End Plug – 2-1/2" x 2-1/2" x 1/4" Tubing Size	2
49122	End Plug – 2" x 2" x 1/4" Tubing Size	2
35275	Service Manual — AC	1
29353	Pad Cover	10/12
15796	Ratcheting Handle – 3/8-16 x 4" (for optional support foot assembly)	1
15632	Pad Filter Screen – Small (for VPFS9 pad)	10
15630	Pad Filter Screen – Large (for G3370 pad)	10/12
13532	Cotterless Hitch Pin – 1/2" ID x 3-3/8" (for optional support foot assembly)	1
10900	Shoulder Bolt – Socket Head – 5/16" x 1/2" x 1/4-20 Thread (for mounting pads)	60/72
10628AM	Nylon Tip Socket Head Set Screw – 3/8-16 x 1" (for optional support foot assembly)	1

*Length as required; sold by the inch (approx 2.5 cm).

See **SERVICE MANUAL #35275** for additional parts.

**SERVICE ONLY WITH IDENTICAL REPLACEMENT PARTS,
AVAILABLE AT WPG.COM OR THROUGH AN AUTHORIZED WPG DEALER**

REGISTRATION AND LIMITED WARRANTY

TO REGISTER THIS WPG PRODUCT

Go to the [PRODUCT REGISTRATION](#) page at [wpg.com](#) and complete the form. Registration keeps you advised of important updates and notifications, and simplifies inquiries to WPG regarding your product. Registration is **not** required to activate your Limited Warranty (see next section).

ABOUT THE LIMITED WARRANTY



Note: Read the [WARRANTY RETURN FORM](#) at [wpg.com](#) for important details about the Limited Warranty.

Wood's Powr-Grip® (WPG) products are warranted to be free from defects in manufacturing and materials for 1 year from the date of purchase.

If a problem develops during the warranty period, follow the instructions below to obtain warranty service. If inspection shows that the product has a defect, WPG will repair or replace the product without charge.



Obtaining Warranty Service or Repair Service

For customers in the U.S. and Canada: Go to the [EXCHANGES, REPAIRS, & WARRANTIES](#) page at [wpg.com](#) and click the applicable link. Alternatively, you may contact the WPG Technical Service Department (see contact information below).

For customers in all other localities: Contact the WPG Technical Service Department (see contact information below) or your dealer for assistance.

ADDRESS	EMAIL	PHONE
Wood's Powr-Grip Co., Inc. 908 West Main St. Laurel, MT USA 59044	contactus@wpg.com	(1) 800-548-7341 (1) 406-628-8231

KEEP FOR FUTURE REFERENCE

ENGINEERING DRAWINGS



INTENDED FOR USE BY QUALIFIED SERVICE
PERSONNEL • READ AND UNDERSTAND BEFORE
ROUTING, WIRING AND/OR ASSEMBLING




908 W. Main • P.O. Box 368
Laurel, MT USA 59044
(1) 800-548-7341
(1) 406-628-8231
www.wpg.com

**GENTLE GIANT,
AC-VOLTAGE**

Model numbers: VLGG109AC, VLGG1011LAC, VLGG1211LAC

TYPE: STANDARD		FILE DIRECTORY: 716	
WIRE LEGEND: CONTROLLED BY WIRING SYMBOLS DRAWING EXCEPT AS NOTED AND BELOW. LINE STYLES AND WIDTHS FOR WIRE UNLESS NOTED OTHERWISE. --- N/A --- --- 20AWG --- --- 18AWG --- --- 16AWG ---		716-W01 [W01]	
THIS DRAWING IS THE PROPERTY OF WOOD'S POWR-GRIP CO., INC. LAUREL, MONTANA U.S.A. IT IS LOANED WITH THE UNDERSTANDING THAT NEITHER IT NOR ANY INFORMATION CONTAINED THEREIN WILL BE COPIED, PUBLISHED OR TRANSMITTED TO OTHERS WITHOUT EXPRESS WRITTEN PERMISSION.		W01 [W01]	
STANDARD FLOW SOLENOID VALVE PACKAGE		N/A	
VALVE ENCLOSURE WIRING DIAGRAM		D716-W01 [W01]	
SIZE: A	SCALE: NONE	REVISION: 01.A	ECN NUMBER: 3683
CHECKED: <i>CL</i>		ECN DATE: 03/11/2015	
APPROVED: <i>CL</i>		SPE: N/A	
DATE: 05/03/2002		EST. WEIGHT: N/A	
PRODUCT MANAGER: DANIEL M.			

NOTES:
1) MAY SUBSTITUTE GRN W/ YS FOR GRN.

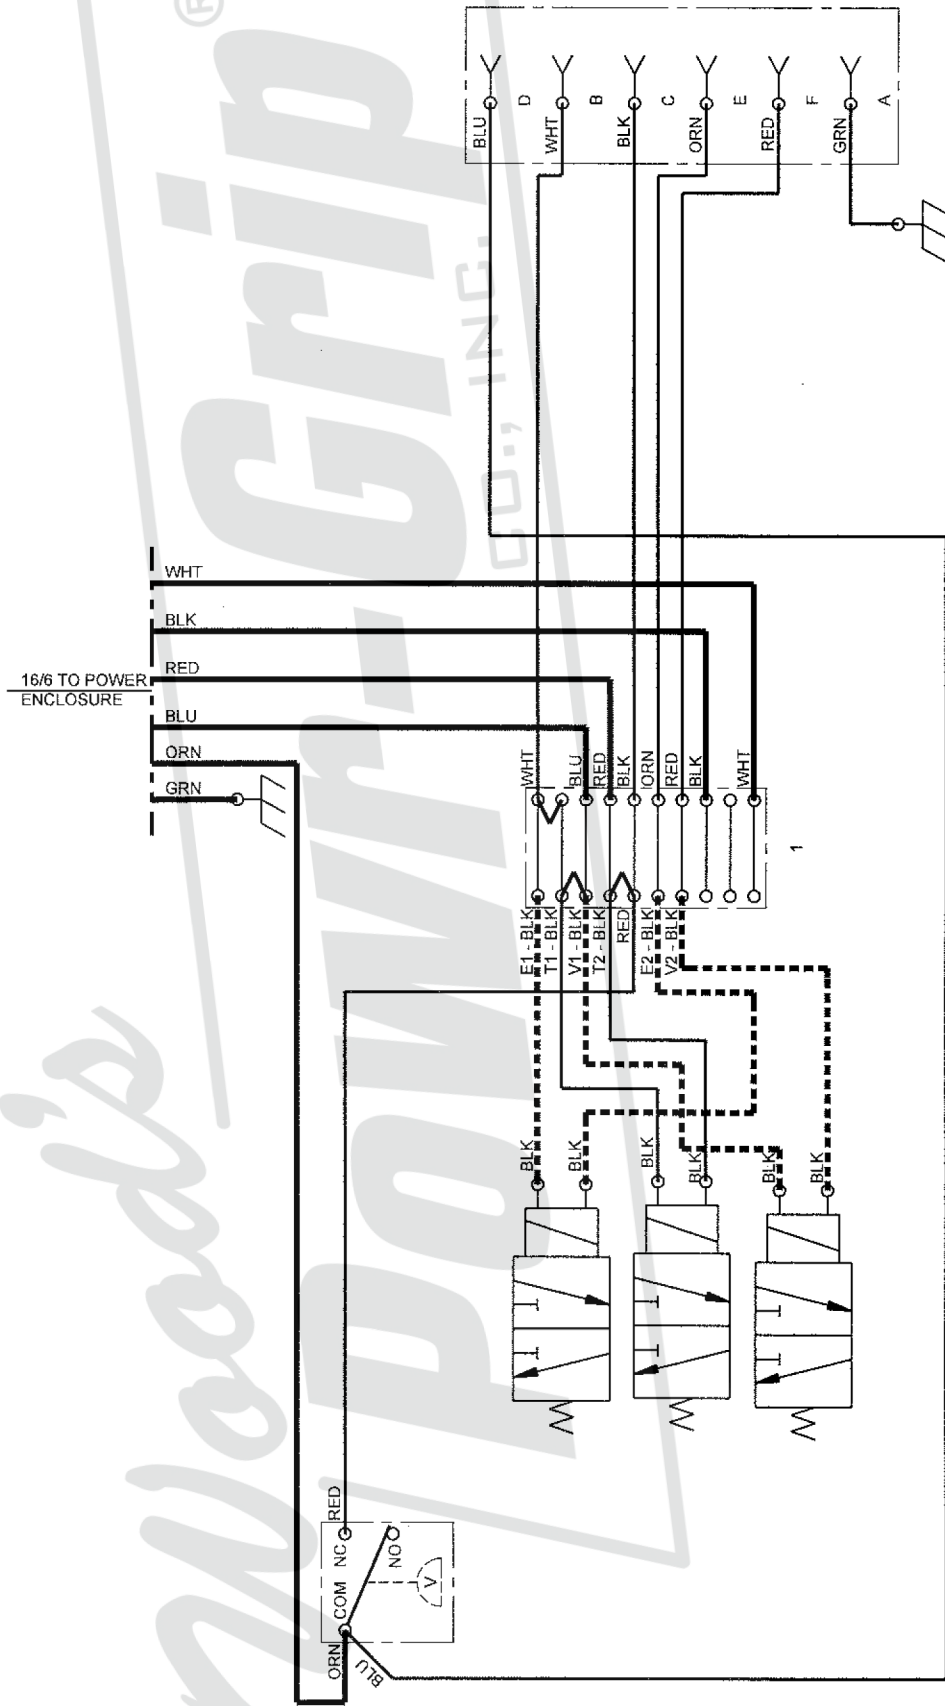

**WIRE LEGEND: CONTROLLED BY
WIRING SYMBOLS DRAWING
EXCEPT AS NOTED AND BELOW.**

NOTES:

- (1) SUBSTITUTE YELLOW WIRE FOR BLUE IF BLUE WIRE IS UNAVAILABLE.
- (2) SUBSTITUTE BROWN WIRE FOR ORANGE IF ORANGE WIRE IS UNAVAILABLE.

TYPE: STANDARD

FILE DIRECTORY:
FILE [SHEET]:

716-W02 [W02]

LINE STYLES AND WIDTHS FOR
WIRE UNLESS NOTED OTHERWISE.

	16-18AWG
N/A	N/A
N/A	N/A

PRODUCT MANAGER:	DATE:
------------------	-------

PRODUCT MANAGER:	DATE:
DANIEL M	05/02/2000

CHECKED:	20	10 30 18
----------	----	----------

APPROVED:	<i>Chen</i>	7-30-18
-----------	-------------	---------

THIS DRAWING IS THE PROPERTY OF **WOOD'S POWER-GRIP CO., INC.**,
LAUREL, MONTANA, U.S.A.
 **WPG**
IT IS LOANED WITH THE UNDERSTANDING THAT NEITHER IT NOR ANY
INFORMATION CONTAINED THEREIN WILL BE COPIED, PUBLISHED OR
TRANSMITTED TO OTHERS WITHOUT EXPRESS WRITTEN PERMISSION.




STANDARD-FLOW SOLENOID-VALVE PACKAGE

N/A

AC 1-ACTION RELEASE PENDANT WIRING SCHEMATIC
D716-W02 [W02]

FOR SALE: DOMINION

SIZE:	SCALE:	REVISION:	ECN NUMBER:	ECN DATE:	ECN BY:	EST. WEIGHT:
A	NONE	03 A	4631	07/12/2018	CCH	N/A

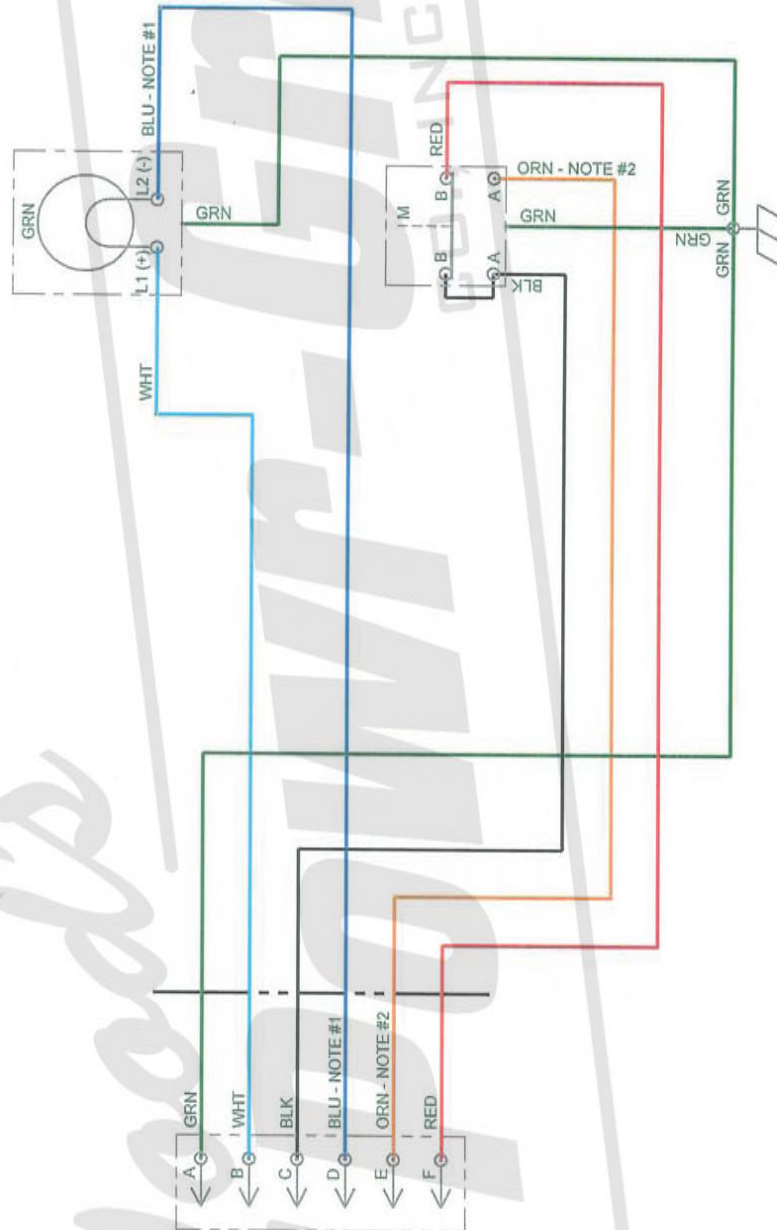

FILE DIRECTORY:

TYPE: **STANDARD**WIRE LEGEND: CONTROLLED BY
WIRING SYMBOLS DRAWING
EXCEPT AS NOTED AND BELOW.LINE STYLES AND WIDTHS FOR
WIRE UNLESS NOTED OTHERWISE.N/A 20AWG N/A 16AWG
N/A NOTE #1 N/A 14AWG

PRODUCT MANAGER:

DANIEL M.

CHECKED: *CR*APPROVED: *CR*

DATE: 04/01/2002

02-14-17

2-14-17

716B-W01 [B-W01]

THIS DRAWING IS THE PROPERTY OF **WOOD'S POWR-GRIP CO., INC.**
IT IS LOANED WITH THE UNDERSTANDING THAT NEITHER IT NOR ANY
INFORMATION CONTAINED THEREIN WILL BE COPIED, PUBLISHED OR
TRANSMITTED TO OTHERS WITHOUT EXPRESS WRITTEN PERMISSION.
WOOD'S POWR-GRIP CO., INC.
LAUREL, MONTANA
U.S.A.

STANDARD-FLOW SOLENOID-VALVE PACKAGE

TRANSFORMER ENCLOSURE


POWER SWITCH ENCLOSURE WIRING SCHEMATIC

D716B-W01 [B-W01]

SIZE: **A** SCALE: **NONE** REVISION: **03.A** EGN NUMBER: **4263** EGN DATE: **02/06/2017** EST. WEIGHT: **N/A**TO VACUUM PUMP OR
CAPACITOR ENCLOSURE

NOTES:

- (1) SEE PUMP WIRING DIAGRAM FOR SPECIFIC WIRE GAUGE.
- (2) GROUND WIRES MAY BE GREEN OR GREEN/YELLOW STRIPE.
- (3) POWER PLUG CONNECTIONS SHOWN FROM WIRE CONNECTION END.

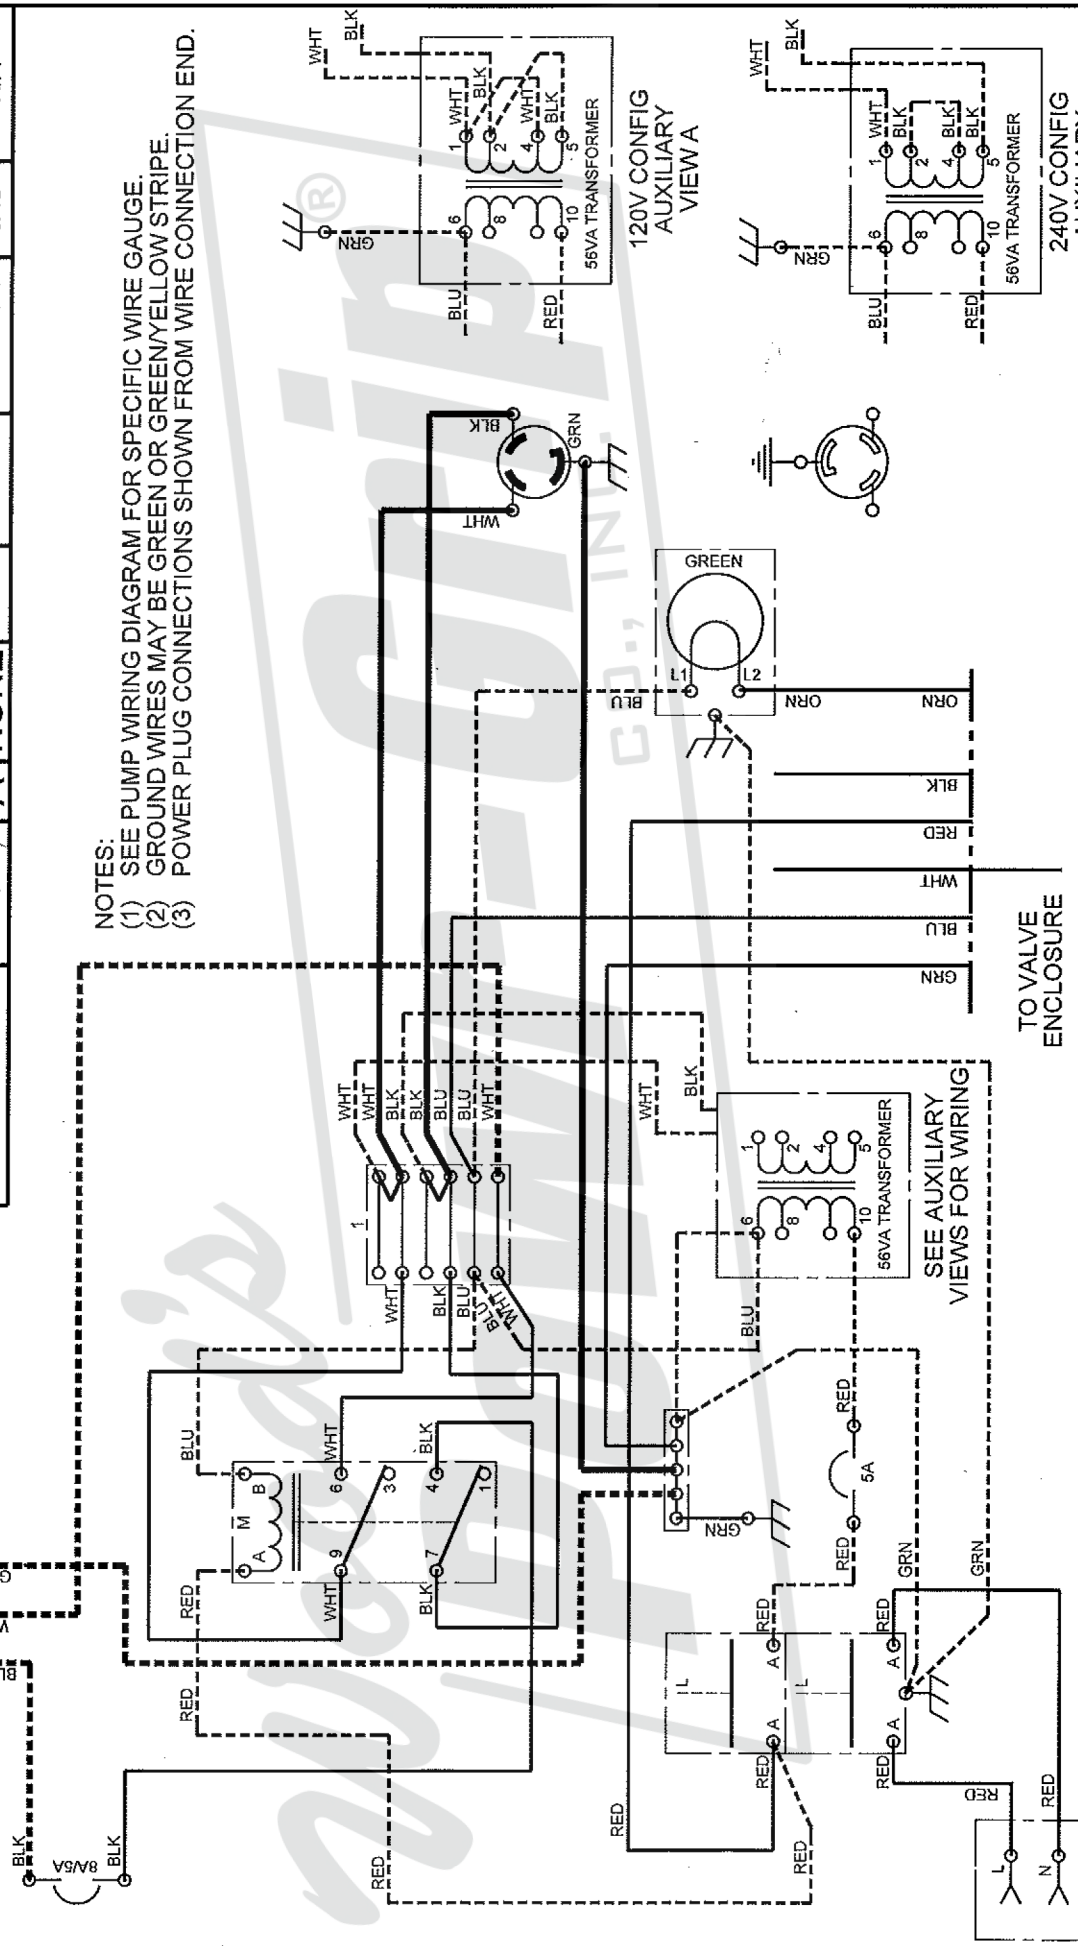TO VALVE
ENCLOSURESEE AUXILIARY
VIEWS FOR WIRING120V CONFIG
AUXILIARY
VIEW A240V CONFIG
AUXILIARY
VIEW B