

KEEP FOR FUTURE REFERENCE

INSTRUCTIONS

MANUAL



908 W. Main • P.O. Box 368
Laurel, MT USA 59044
800-548-7341 (phone)
406-628-8231 (phone)
406-628-8354 (fax)
www.WPG.com

 **INTENDED FOR USE BY SKILLED
TECHNICAL PROFESSIONALS • READ
AND UNDERSTAND BEFORE USING**



LONG EXTENSION ARMS



Stock number: 95725

TABLE OF CONTENTS

SPECIFICATIONS	3
ASSEMBLY/OPERATION	5
REPLACEMENT PARTS.....	6
LIMITED WARRANTY	7
TO OBTAIN REPAIRS OR WARRANTY SERVICE.....	7



SPECIFICATIONS


Product Description	Long Extension Arms provide a larger Pad Spread to reduce overhang on loads.		
Stock Number	95725 <i>Note: Sold per arm.</i>		
 Weight Increase	10 lbs [5 kg] when 4 arms are installed <i>Note: This weight should be added to the Lifter Weight when determining hoisting equipment capacity.</i>		
Applicable Lifter Model	MRT411LDC(2/3)	MRTALP811LDC(2/3)	MRTA811LAC/AIR
 Adjusted Maximum Load Capacity¹	500 lbs [225 kg]	1000 lbs [455 kg]	1000 lbs [455 kg]
Adjusted Maximum Pad Spread²	— (to outer edges) —		
Large Rectangular Configuration	59¼" x 86½" [151 cm x 220 cm]	63¾" x 111½" [162 cm x 283 cm]	80¼" x 126½" [204 cm x 321 cm]
Narrow Linear Configuration	15¾" x 100¼" [40 cm x 255 cm]	17" x 124" [43 cm x 315 cm]	13¾" x 145¼" [35 cm x 369 cm]

1..... Applicable when any pad is installed in the outermost position on a Long Extension Arm.

2..... Pad Spreads are shown for lifters equipped with 11" [28 cm], lipped vacuum pads (model G3370). For 10" [25 cm], lipped pads (model HV11), subtract 1¼" [5 cm] from each dimension listed. For 9" [23 cm] pads (model VPFS9), subtract 2¾" [7 cm] from each dimension listed.

Note: Before installing or using the Long Extension Arms read, understand and follow the lifter's OPERATING INSTRUCTIONS except when directed differently in these option instructions. Intended use, assembly, operation, storage, inspections, tests and maintenance in the lifter's instructions should be understood to include options, when relevant. All warnings in the "SAFETY" section, as well as alerts in other sections, are also applicable.

SPECIFICATIONS

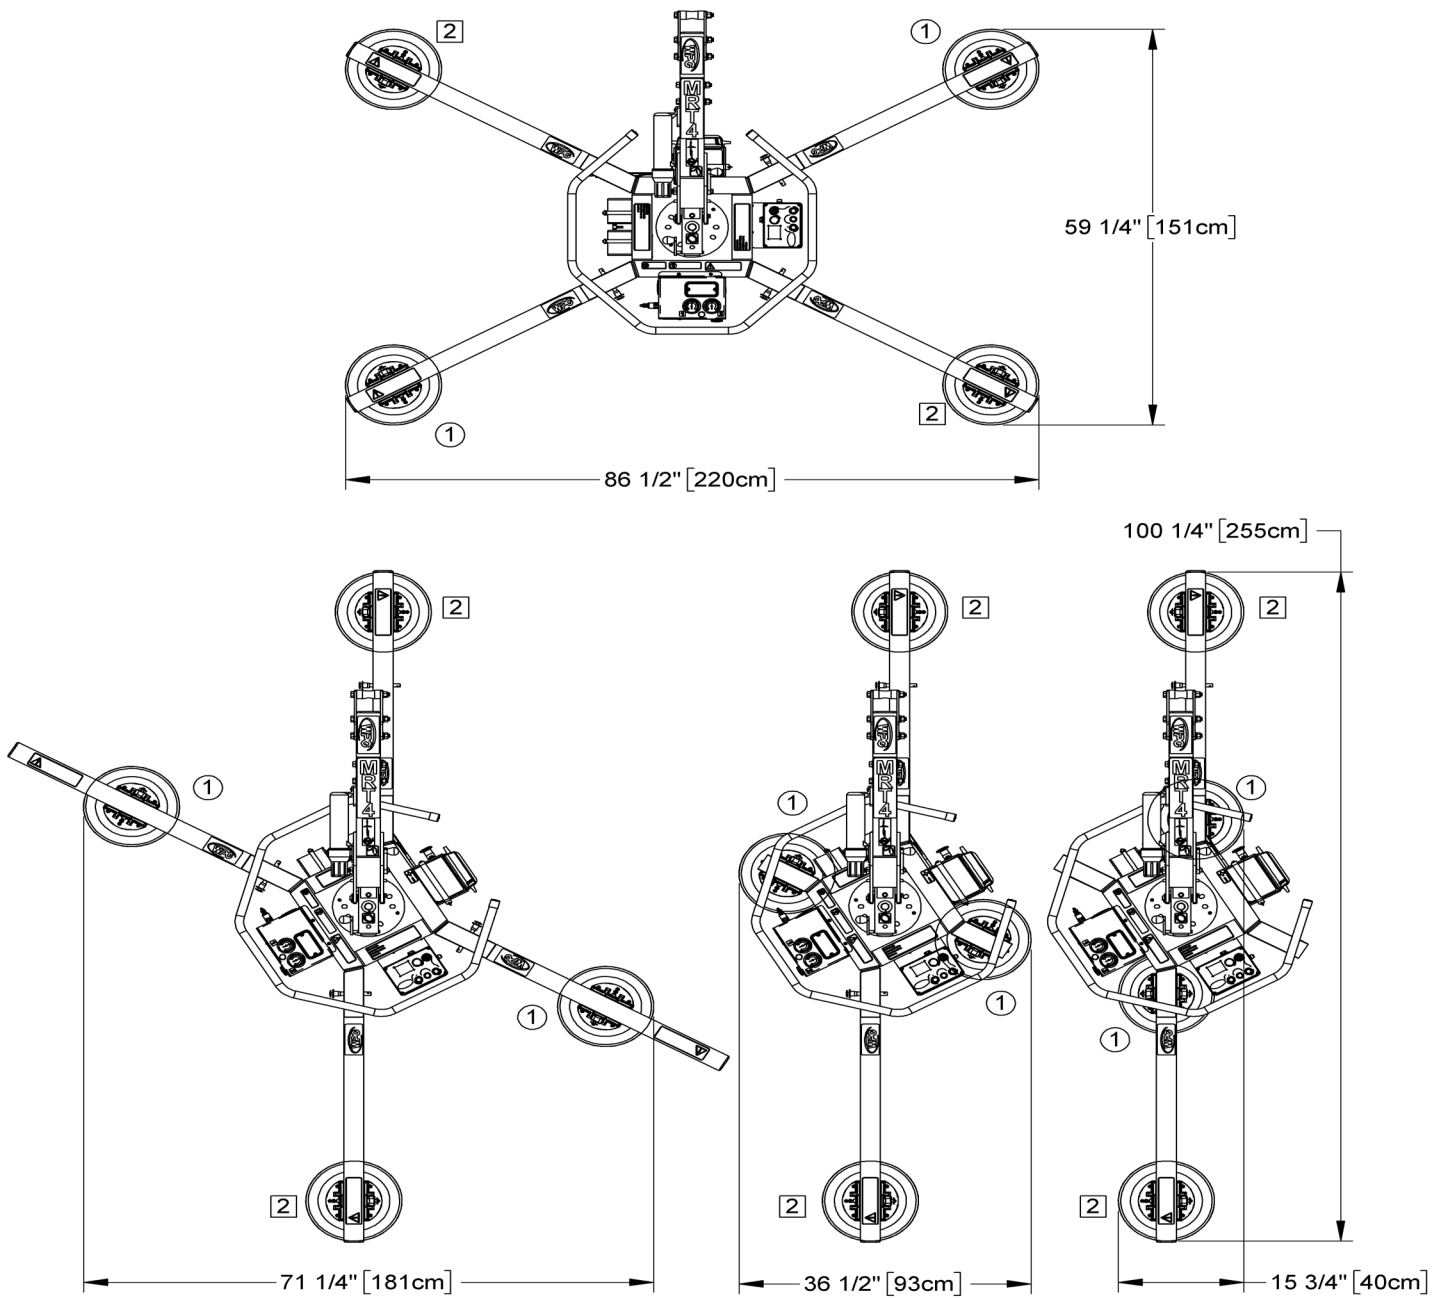

A standard MRT411LDC3 is shown with optional Long Extension Arms.

ASSEMBLY/OPERATION

Assemble the vacuum lifter as directed in the ASSEMBLY section of the lifter's *OPERATING INSTRUCTIONS*. However, substitute Long Extension Arms wherever extension arms are required.

Note: Lifting capacity decreases whenever a vacuum pad is located in the outermost position on any of the Long Extension Arms.



Long Extensions Arms may reduce lifting capacity.

When evaluating the intended use as required in the lifter's *OPERATING INSTRUCTIONS*, **be sure to consider the Adjusted Maximum Load Capacity and Adjusted Pad Spread listed in the preceding SPECIFICATIONS** (not the ones in the lifter's *OPERATING INSTRUCTIONS*).

Otherwise, operate the lifter as directed in the OPERATION section of the lifter's *OPERATING INSTRUCTIONS*.

REPLACEMENT PARTS

Stock No.	Description	Qty.
49150	End Plug – 2-1/2" x 2-1/2" x 1/4" Tubing Size	4*
13532	Cotterless Hitch Pin – 1/2" x 4"	8*

*Assumes 4 arms in use.

***SERVICE ONLY WITH IDENTICAL REPLACEMENT PARTS,
AVAILABLE AT WPG.COM OR THROUGH AN AUTHORIZED WPG DEALER***

LIMITED WARRANTY

Wood's Powr-Grip® (WPG) products are carefully constructed, thoroughly inspected at various stages of production, and individually tested. They are warranted to be free from defects in workmanship and materials for a period of one year from the date of purchase.

If a problem develops during the warranty period, follow the instructions below to obtain warranty service. If inspection shows that the problem is due to defective workmanship or materials, WPG will repair the product without charge.

Warranty does not apply when ...

- modifications have been made to the product after leaving the factory
- rubber portions have been cut or scratched during use;
- repairs are required due to abnormal wear and tear, and/or;
- the product has been damaged, misused or neglected.

If a problem is not covered under warranty, WPG will notify the customer of costs prior to repair. If the customer agrees to pay all repair costs and to receive the repaired product on a C.O.D. basis, then WPG will proceed with repairs.

TO OBTAIN REPAIRS OR WARRANTY SERVICE

For purchases in *North America*:

Contact the WPG Technical Service Department. When factory service is required, ship the complete product – prepaid – along with your name, address and phone number to the street address listed at the bottom of this page. WPG may be reached by phone or fax numbers listed below.

For purchases in all *other localities*:

Contact your dealer or the WPG Technical Service Department for assistance. WPG may be reached by phone or fax numbers listed below.

Wood's Powr-Grip Co., Inc.

908 West Main St.

Laurel, MT 59044 USA

406-628-8231 (phone)

800-548-7341 (phone)

406-628-8354 (fax)