


N-SERIES HAND CUP INSTRUCTIONS

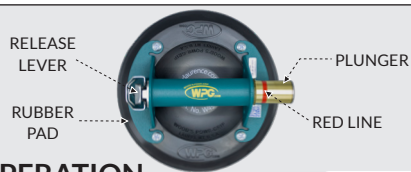

OPERATION

To Attach

- 1) Position the hand cup on the contact surface so the red line will be visible if it should appear while lifting the load.

Caution: Some rubber compounds may stain light surfaces or deform soft coatings. When in doubt, test a sample of such materials for permanent effects.

- 2) Press the rubber pad against the load as needed to form a continuous seal.

Caution: Make sure the load is supported as needed to prevent breakage.

- 3) Pump the plunger until the cup attaches completely. When the red line is hidden, vacuum is sufficient for lifting.

- 4) Check the plunger frequently to make sure the cup remains securely attached. If the red line appears while lifting, set down the load immediately and pump the plunger until the red line is hidden again (see WARNINGS).

To Release

- 1) Set the load on a secure support.
- 2) Press the release lever until the cup disengages completely.

Caution: Remove the cup when not in use.



SCAN OR CLICK TO WATCH
INSTRUCTIONAL VIDEO

SPECIFICATIONS

Product Description

These tools use vacuum to support loads for manual handling, as follows:

Environmental Conditions

- Temperatures: 10° to 120° F (-12° to 49° C)
- Elevation: up to 5,000' (1,524 m).

Note: Maximum Load Capacity includes a 3:1 design factor and requires:

- Attachment on clean, dry, relatively smooth, flat, nonporous surfaces¹
- Minimum vacuum level of 17-1/2" Hg (-59 kPa)
- Friction coefficient of 1

Model	Rubber Pad	Nominal Diameter	Max. Load Capacity ²	Load Surface
W4000(LM) H4300(LM) W4950(LM)	VPFS8L	8" (20 cm)	125 lbs (57 kg)	flat, smooth
TS8P TS8M	G0695TS	8" (20 cm)	75 lbs (34 kg)	flat, textured ³
H5300 W5450	G0725	9" (23 cm)	150 lbs (68 kg)	flat, smooth
W5450CS	VPCS9	9" (23 cm)	150 lbs (68 kg)	curved or flat
H6300 W6450	G0750	10" (25 cm)	175 lbs (79 kg)	curved or irregular ^{3,4}

¹ Moisture or contaminants can reduce the slip resistance of the rubber pad.

² The Maximum Load Capacity is based on testing under controlled conditions with new hand cups. Many factors can reduce the capacity, such as loads with curved, irregular, or low-friction surfaces. Contact an authorized dealer or visit crlaurence.com for more information.

³ Extreme surface variation may prevent these cups from attaching or remaining attached.

⁴ **Caution:** Do not attach these cups to thin, fragile materials.

MAINTENANCE

Service

If the hand cup does not function normally, first clean the rubber pad according to the directions to follow. If the condition persists, see TROUBLESHOOTING.

Note: Replace the pad at least once every 2 years or whenever damage is discovered (see Inspection).

Cleaning

- 1) Remove the felt filter from the rubber pad.
- 2) Use a clean sponge or lint-free cloth to apply soapy water or another mild cleanser to the pad face (see WARNINGS).
- 3) Wipe all residue from the pad face.
- 4) Allow the pad to dry and reinstall the felt filter.



SCAN OR CLICK TO WATCH
INSTRUCTIONAL VIDEO

Inspection

Inspect the cup regularly for the following faults:

- cuts or damage to sealing edges of rubber pad
- cracks or dents in handle or pump
- reappearance of red line soon after attaching cup
- sluggishness or dramatic changes in pump action
- slick surface or stiffness of rubber pad
- felt filter missing from pad face

Correct any faults before using the cup (see Service).

Storage

Store the cup in clean, dry condition within its protective carrying case.

WARNINGS

Failure to observe WARNINGS could damage the hand cup or the load, or cause injury to the user.

- Do not use the cup to lift loads that exceed the Maximum Load Capacity (see SPECIFICATIONS).
- Do not use the cup to support a person.
- Do not leave a cup unattended which could injure people if it disengages unexpectedly.
- Do not place the rubber pad against surfaces which could damage the sealing edges.
- Avoid conditions that could cause the cup to slip or to disengage prematurely, such as: contaminants, cuts or scratches in the pad face or load surface; attaching the cup to porous materials; or applying pressure against the pad edge.
- Do not use the cup to lift when the red line is visible. If the red line reappears frequently, discontinue use and see Service.
- Do not allow anything to interfere with free movement of the plunger while the cup is attached.
- Do not touch the release lever while lifting.
- Do not use harsh chemicals (such as solvents or gasoline) or rubber cleaners and conditioners to clean the pad.

LIMITED WARRANTY

Wood's Powr-Grip products are guaranteed to be free of any defects in manufacturing or materials for **1 year from the date of purchase.**

Warranty does **NOT** cover:

- ✓ Cut or scratched rubber parts
- ✓ Parts damaged by customer
- ✓ Abnormal wear and tear
- ✓ Abuse, misuse or neglect
- ✓ Modified products

TROUBLESHOOTING

Scan or click the following codes for:



Troubleshooting Guide
Metal Hand Cups



Troubleshooting Video
Metal Hand Cups



Troubleshooting Guide
Industrial Plastic Hand Cups

KEEP FOR YOUR RECORDS

Record this information, in case you need to claim Warranty service.

Date of Purchase:

Purchased From:

Model Number:

Stock Number:



C.R. LAURENCE CO., INC.
PHONE TOLL FREE (800) 421-6144
FAX TOLL FREE (800) 262-3299
crlaurence.com